

## FT4122 – Horizontal Exam desk Trolley (40 capacity)

**Parts required:**

1no. Base frame

2no. Handles

1no. Support Bar

4no. Castors (2 braked / 2 unbraked)

4 x 70mm M8 bolts with 5mm hex socket head: For Handles


2 x 40mm M8 bolts with 5mm hex socket head: For Support Bar

16 x 20mm M8 bolts with 5mm hex socket head: For Castors

22 x M8 hex flange nut nyloc


Allen key 5mm (supplied)

1no. 13mm Spanner (not supplied)

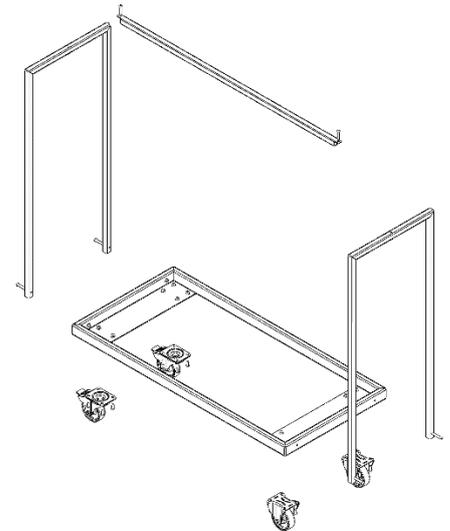


**Step 1:**

Attach the 2 handles to the base frame using the 4 x 70mm M8 bolts and 4 x hex flange nuts.

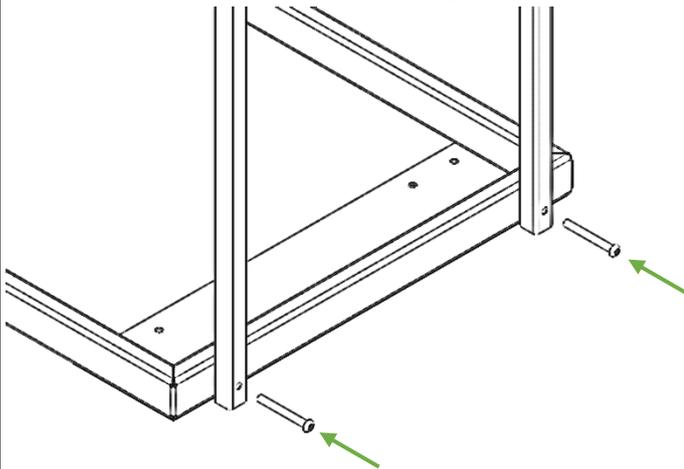


**Step 2:**

Attach the Support Bar on both sides using the 2 x 40mm M8 bolts and 2 x hex flange nuts.

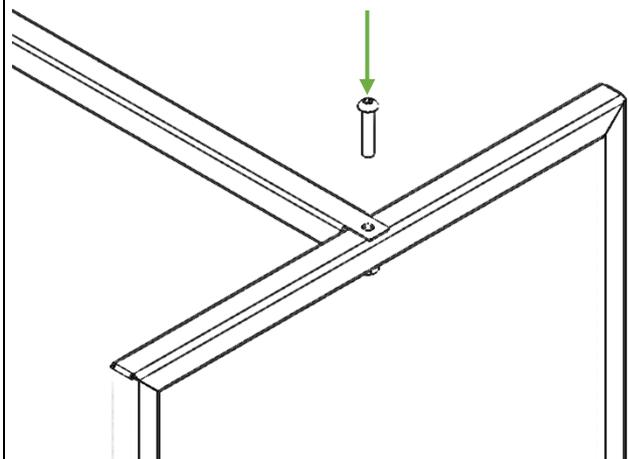

**Step 3: Tip – flip the trolley upside down.**

Attach the 4 castors to the base plates using the 16 x 20mm M8 bolts and 16 x hex flange nuts.

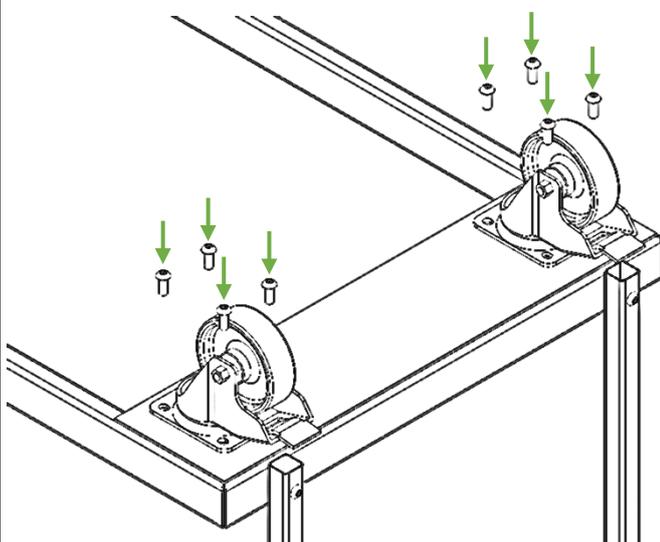

**Step 4:**

Check that all bolts are securely tightened. This should be carried out as part of routine maintenance.

